

NISSAN PATROL

Y61-A



PATROL

OWNER'S MANUAL

UTSC2-E7G0K



Printing: September 2008 (57)
Publication No.: OM7E-0Y61G0
Printed in Japan

Y61-A

Foreword

Welcome to the growing family of new NISSAN owners. This vehicle has been delivered to you with confidence. It has been produced using the latest techniques and strict quality control.

This manual was prepared to help you understand the operation and maintenance of your vehicle so that you may enjoy many kilometers (miles) of driving pleasure. Please read through this manual before operating your vehicle.

A separate warranty information booklet explains details about the warranties covering your vehicle.

Your NISSAN dealer knows your vehicle best. When you require any service or have any questions, we will be glad to assist you with the extensive resources available for you.

IMPORTANT SAFETY INFORMATION

REMINDERS FOR SAFETY!

Follow these important driving rules to help ensure a safe and complete trip for you and your passengers!

- **NEVER** drive under the influence of alcohol or drugs.
- **ALWAYS** observe posted speed limits and never drive too fast for conditions.
- **ALWAYS** use your seat belts and appropriate child restraint systems.
- **ALWAYS** provide information about the proper use of vehicle safety features to all occupants of the vehicle.
- **ALWAYS** review this Owner's Manual for important safety information.

WHEN READING THE MANUAL

This manual includes information for all options available on this model. Therefore, you may find some information that does not apply to your vehicle.


All information, specifications and illustrations in this manual are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

MODIFICATION OF YOUR VEHICLE


This vehicle should not be modified. Modification could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under NISSAN warranties.

READ FIRST — THEN DRIVE SAFELY

Before driving your vehicle, read this Owner's Manual carefully. This will ensure familiarity with controls and maintenance requirements, assisting you in the safe operation of your vehicle.

Throughout this manual we have used the symbol  followed by the word **WARNING**. This is used to indicate the presence of a hazard which may cause the possibility of a personal injury or other damage and must be followed precisely.

The word **CAUTION** is also used throughout the manual to indicate the presence of a hazard that could cause minor or moderate personal injury or damages to your vehicle. To avoid or reduce the risk, the procedures must be followed carefully.

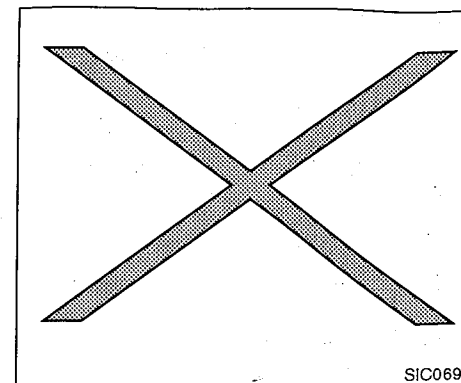

If you see this symbol, it means "Do not do this" or "Do not let this happen".




If you see a symbol similar to these in an illustration, it means the arrow points to the front of the vehicle.




Arrows in an illustration that are similar to these indicate movement or action.



Arrows in an illustration that are similar to these call attention to an item in the illustration.

For descriptions specified for four-wheel drive (4WD) models, a  mark is placed at the beginning of the applicable sections/items.

Failure to operate 4WD models correctly may result in loss of control or an accident. Be sure to read " DRIVING FOUR-WHEEL DRIVE (4WD) SAFELY" in the "5. Starting and driving" section.

©2007 NISSAN MOTOR CO., LTD.
TOKYO, JAPAN


Contents

Safety — seats, seat belts and supplemental restraint system	1
Instruments and controls	2
Pre-driving checks and adjustments	3
Display screen, heater and air conditioner, and audio system	4
Starting and driving	5
In case of emergency	6
Appearance and care	7
Maintenance and do-it-yourself	8
Technical information	9
Index	10

1 Safety — seats, seat belts and supplemental restraint system

Seats	1-2	Seat belt maintenance	1-21
Front seats	1-3	Child restraints.....	1-21
Rear seats	1-6	Precautions on child restraints usage.....	1-21
3rd seats	1-8	Universal child restraints for front passenger seat and rear seats (for Europe)	1-23
Head restraints.....	1-10	Installation of child restraint system.....	1-26
Armrest	1-10	Child restraint anchorage (Wagon model for Australia)	1-37
Seat belts	1-11	Supplemental restraint system	1-38
Precautions on seat belt usage.....	1-11	Front and side air bag system	1-38
Child safety.....	1-13	Driver air bag system	1-44
Pregnant women.....	1-14	Air bag warning labels	1-47
Injured persons.....	1-15	Air bag warning light	1-47
Center mark on seat belts	1-15		
Three-point type seat belts.....	1-15		
Two-point type seat belts	1-20		

SEATS

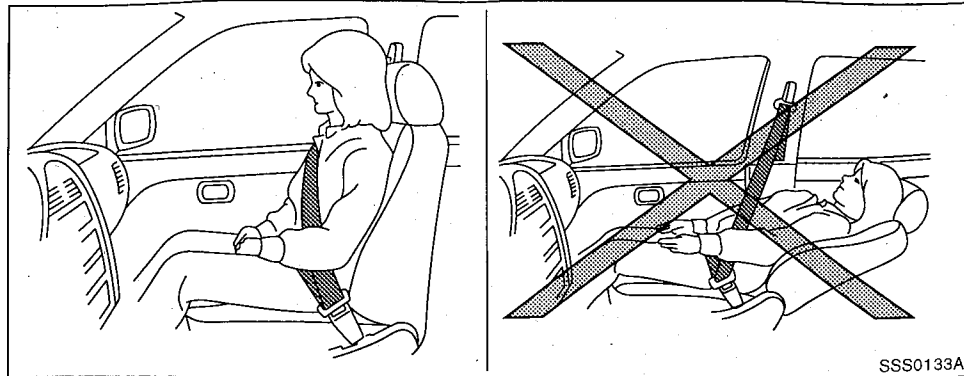


⚠ WARNING:

- Do not drive and/or ride in the vehicle with the seatback reclined. This can be dangerous. The shoulder belt will not be properly against the body. In an accident, you and your passengers could be thrown into the shoulder belt and receive neck or other serious injuries. You and your passengers could also slide under the lap belt and receive serious injuries.

- For the most effective protection while the vehicle is in motion, the seatback should be upright. Always sit well back in the seat and adjust the seat belt properly. (See "Seat belts" later in this screen.)

CAUTION:

When adjusting the seat positions, be sure not to contact any moving parts to avoid possible injuries and/or damages.

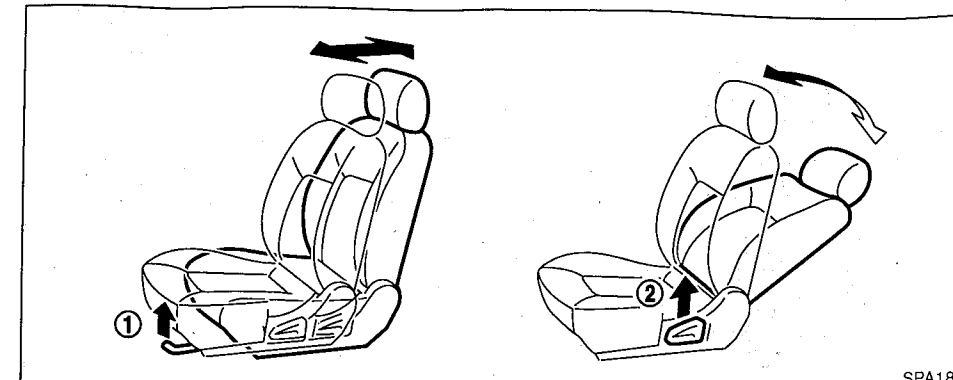

FRONT SEATS

Manual seats adjustment

⚠ WARNING:

- Do not adjust the driver's seat while driving. The seat may move suddenly and could cause loss of control of the vehicle.
- After adjustment, check to make sure the seat is securely locked.
- The seatback should not be reclined any more than needed for comfort. Seat belts are most effective when the passenger sits well back and straight up in the seat. If the seat is reclined, the risk


of sliding under the lap belt and being injured is increased.

Forward and backward:

Pull the lever up ① while you slide the seat forward or backward to the desired position. Release the lever to lock the seat in position.

Reclining:

To recline the seatback, pull the lever up ② and lean back. To bring the seatback forward again, pull the lever and move your body forward. The seatback will move forward.

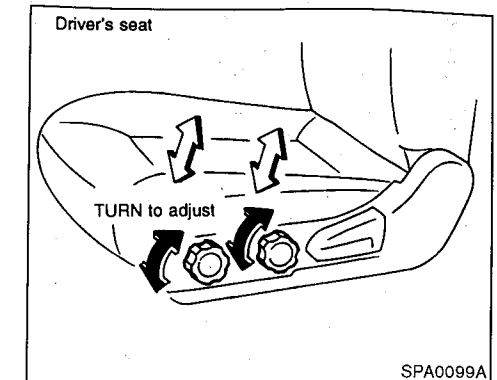

Seat lifter (if so equipped for driver's seat):

Turn either dial to adjust the angle and height of the seat cushion to the desired position.


Power seats adjustment

⚠ WARNING:

- Do not adjust the driver's seat while driving in order that full attention may be given to the driving operations.
- Do not leave children unattended inside the vehicle. They could unknowingly activate switches or controls which could cause a serious accident.
- The seatback should not be reclined any more than needed for comfort. Seat belts are most effective when the passenger sits well back and straight up in the seat. If the seat is reclined, the risk of sliding under the lap belt and being injured is increased.

Operating tips:

- The motor has an auto-reset overload protection circuit. If the motor stops during operation, wait 30 seconds, then reactivate the switch.
- Do not operate the power support seats for a long period of time when the engine is off. This will discharge the battery.

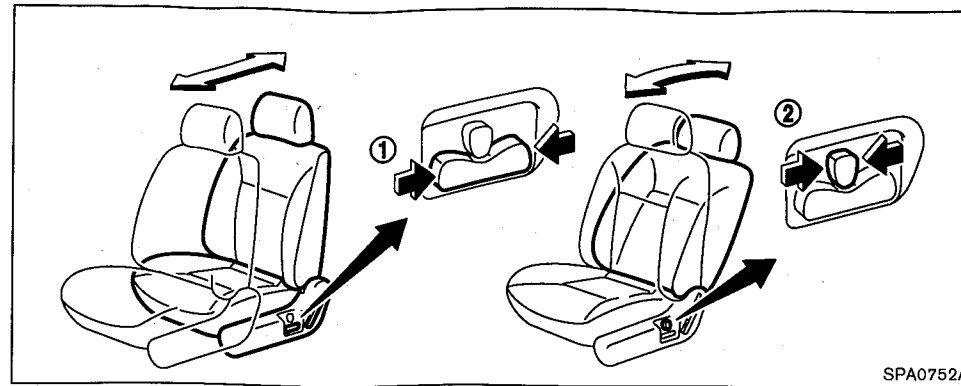


SPA0752A

Forward and backward:

Moving the switch ① forward or backward will slide the seat forward or backward to the desired position.

Reclining:


Move the recline switch ② backward until the desired angle is obtained. To bring the seat back forward again, move the switch forward and move your body forward. The seatback will move forward.

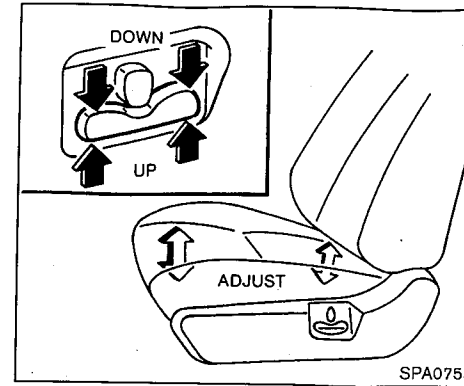

SPA0753

Seat lifter (driver's seat):


Push the front or rear end of the switch up or down to adjust the angle and height of the seat cushion.

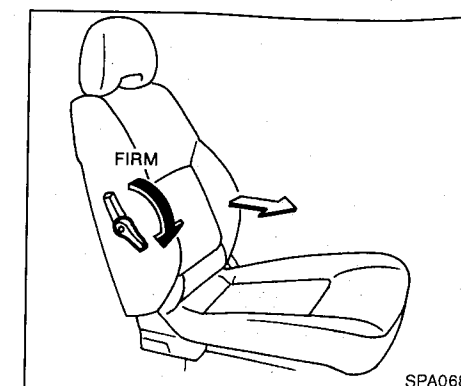

SPA0684

Lumbar support (if so equipped for driver's seat)


Turn the lever forward or backward to adjust the seat lumbar area.

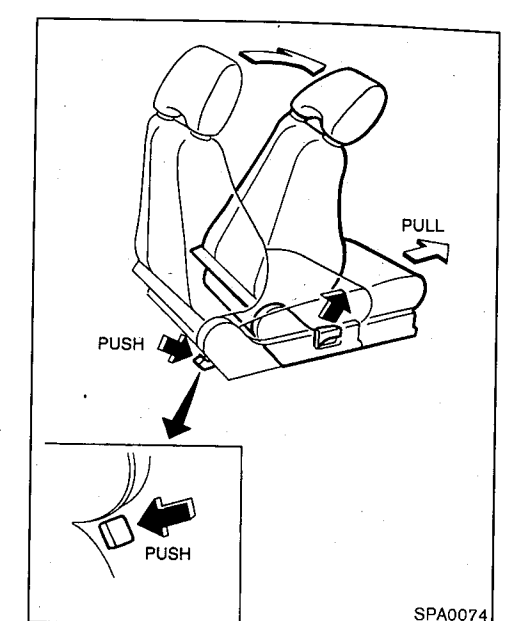

SPA0074

Tilting front seat (if so equipped for Hardtop models)

The front seatback can be tilted to make it easier for the rear seat passengers to get in and out. To tilt the front seatback, pull the reclining lever up or depress the tilt lever. The seatback will tilt and seat will move forward automatically.

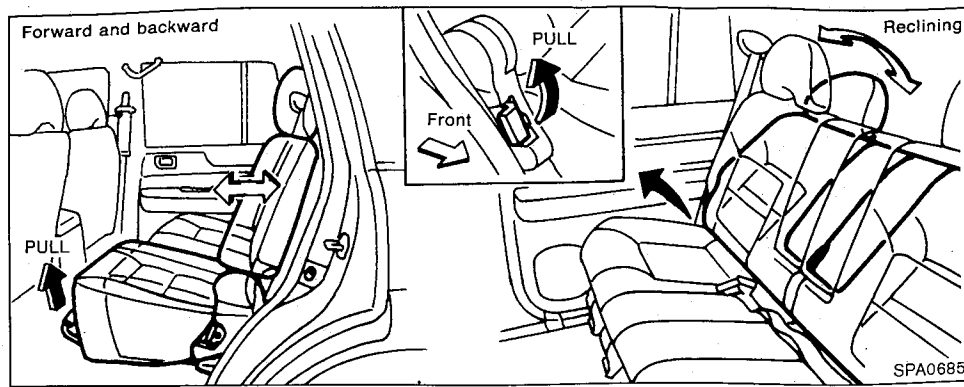

REAR SEATS (if so equipped)

Seats adjustment



Forward and backward:

Pull the lever up while you slide the seat forward or backward to the desired position. Release the lever to lock the seat in position.

Do not sit in the center position when the right and left seats are not aligned.

Reclining:

To recline the seatback, pull the lever up and lean back. To bring the seatback forward again, pull the lever and move your body forward. The seatback will move forward.

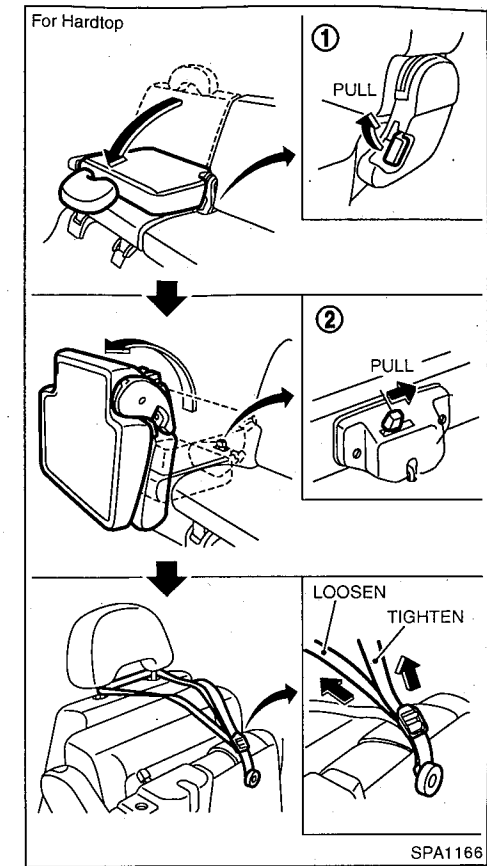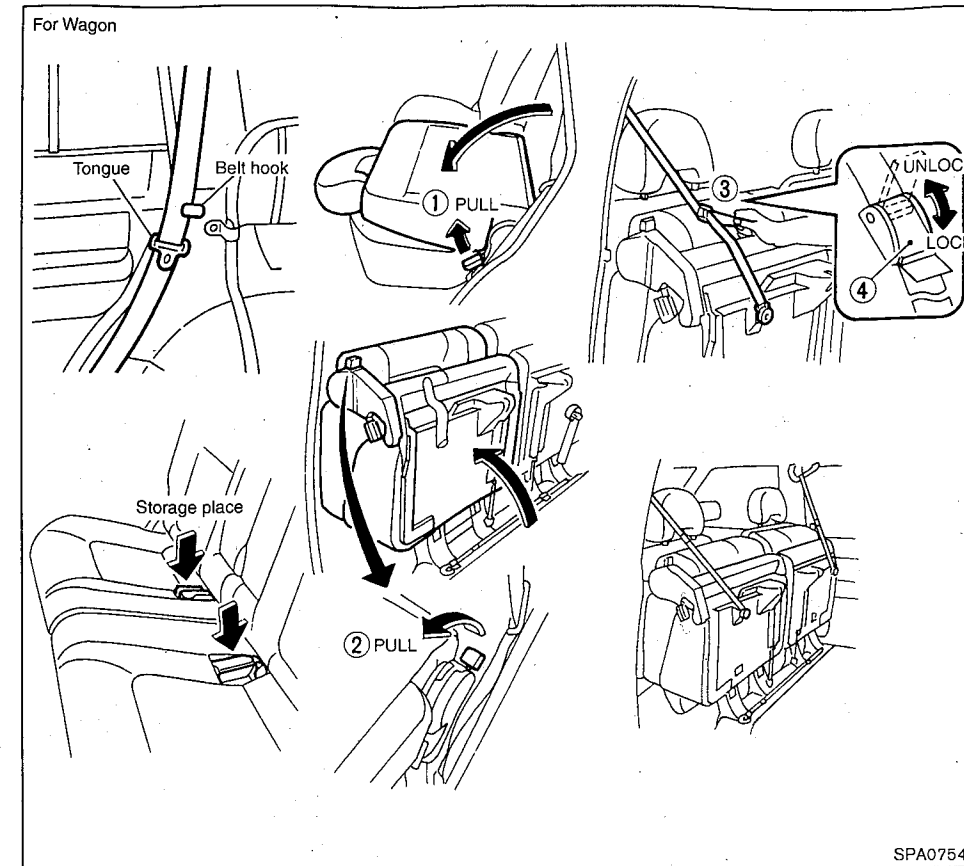


Folding:

1. Fasten the seat belts to the hooks and put the center seat belt and buckles into the storage place.
2. To fold the seat, pull the lever ① and fold the seatback down.
3. Pull the lever ②, and then lift the rear of the seat cushion and fold it forward.
4. (For Wagon):
Fasten the strap to the assist grip and tighten it ③. Securely fasten the buckle ④.

(For Hardtop):

Fasten the strap to the head restraint of the front seat.

- If a seat slide mechanism is equipped, move the seat rearward and fold the seatback.
- When resetting the seat, be sure to pull the seat belts and buckles out from the hooks and storage place.

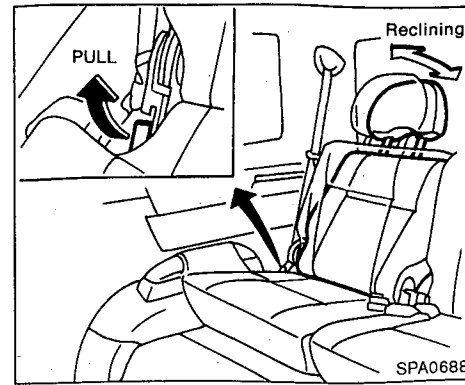


3RD SEATS (if so equipped)

Seats adjustment


Reclining:

To recline the seatback, pull the lever up and lean back. To bring the seatback forward again, pull the lever and move your body forward. The seatback will move forward.

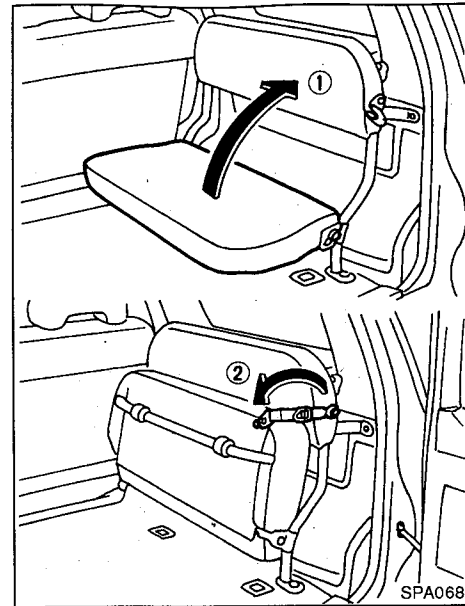

Folding (side facing seat):

1. Lift the seat cushion ①.
2. Secure the seat cushion with the strap ②.

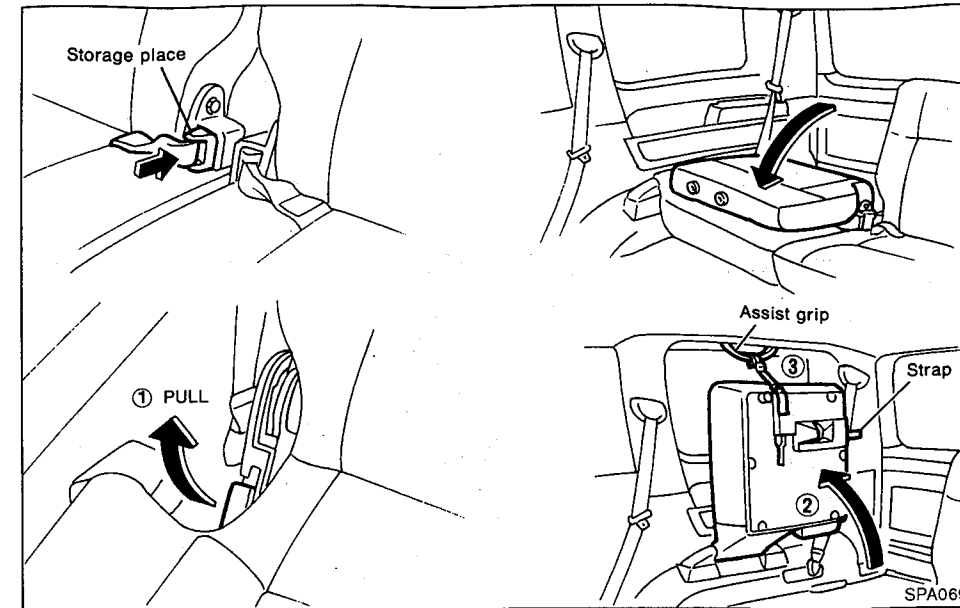


Folding (front facing seat):


1. Put the 3rd seat belt buckle into the storage place.
2. Remove the head restraint.
3. To fold the seat, pull the lever ① and fold the seatback down.
4. Pull the strap and fold to the side ②.

5. Fasten the band hook to the assist grip and tighten it ③.

The removed head restraint should be securely stored.

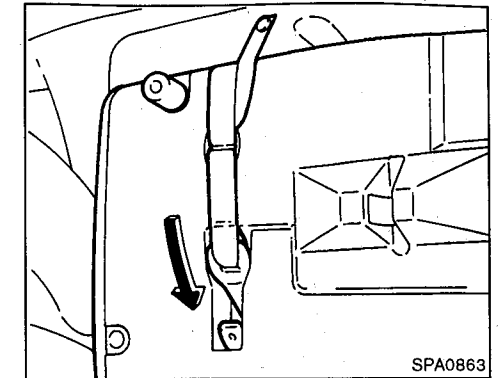

When resetting the seat, be sure to put back the band hook, install the head restraint and pull the seat belt buckle out from the storage place.

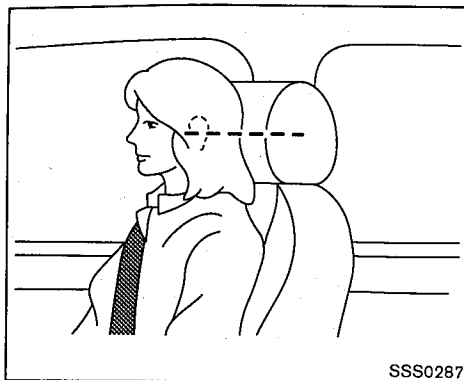

SSS0287


HEAD RESTRAINTS

⚠ WARNING:

Do not drive and/or ride in the vehicle with the head restraint removed. This can be dangerous. Head restraints should be adjusted properly as they may provide significant protection against injury in an accident. Check the height after someone else uses the seat.

The proper adjustment of the head restraint is as illustrated.

Adjust the head restraint so that the head restraint's center is level with the center of the ears.

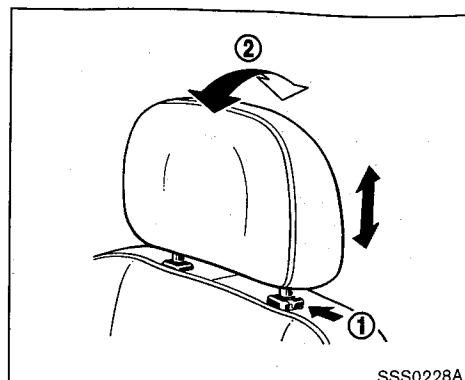


SSS0228A

Adjustment

1. Pull up the head restraint to raise to the proper position.
2. Push in the lock knob ① and push down the head restraint to lower to the proper position.
3. Tilt the head restraint to the desired position ②. (if so equipped)

The adjustable rear head restraint should only be used in the notched stem positions. The lowest head restraint position is the stowed position.

When removing the rear head restraint for seat folding etc., push the lock knob and pull up the head restraint. The removed head restraint should be securely stored.

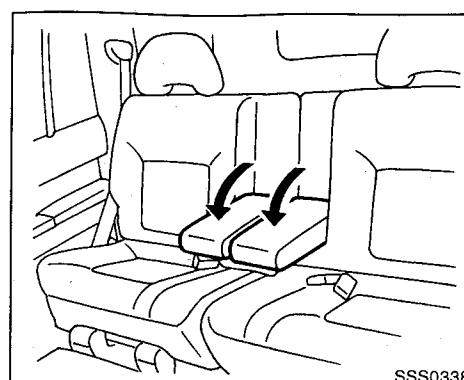


SSS0338

Wagon model

ARMREST

Rear seat (if so equipped)

Pull the armrest forward and lay it horizontal.

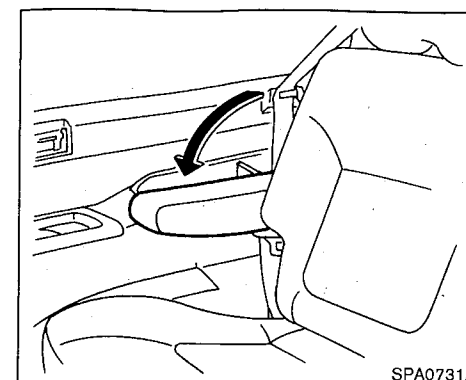


SPA0731A

Hardtop model



SEAT BELTS

PRECAUTIONS ON SEAT BELT USAGE


If you are wearing the seat belt properly adjusted and sitting upright and well back in the seat, chances of being injured or killed in an accident and/or the severity of injury may be greatly reduced. NISSAN strongly encourages you and all of your passengers to buckle up every time you drive, even if your seating position includes the supplemental air bag systems.

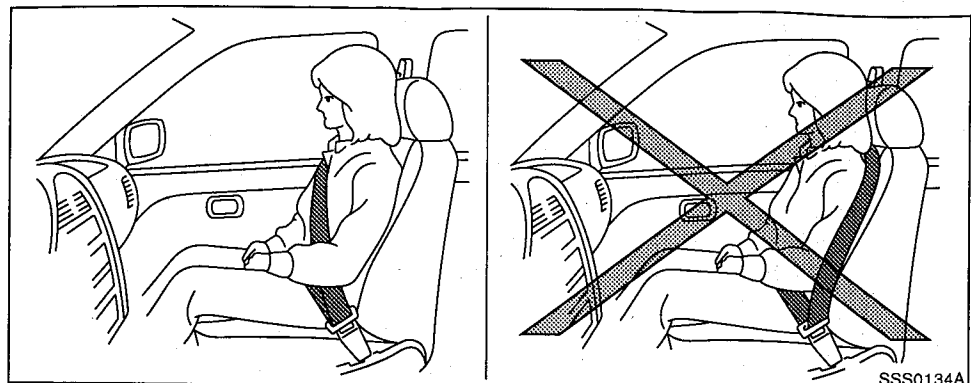



SSS0134A

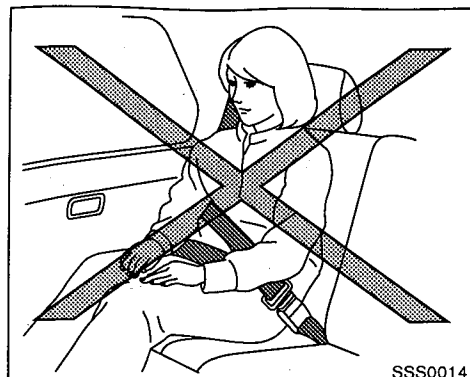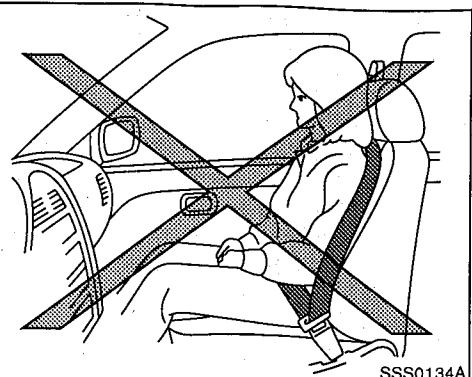

SSS0014

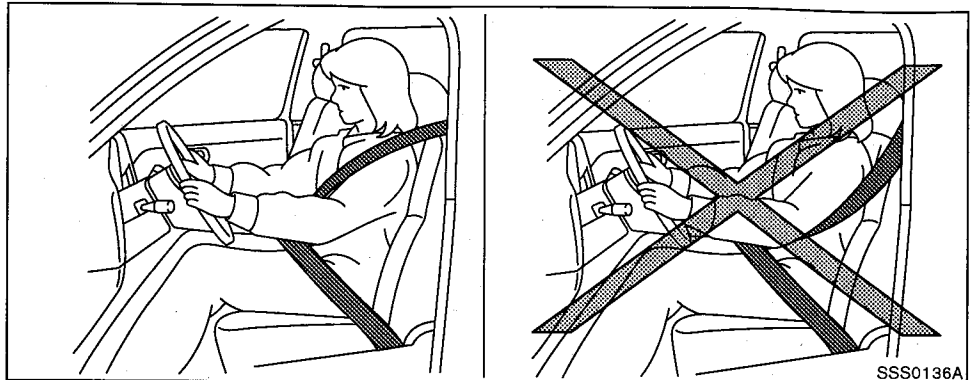

SSS0136A

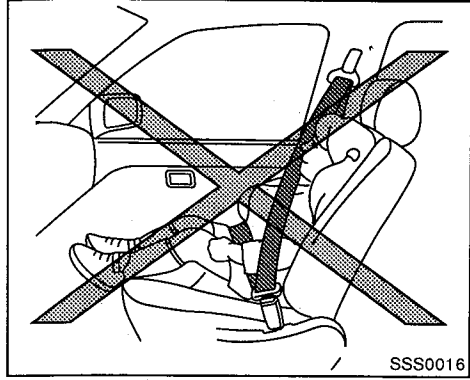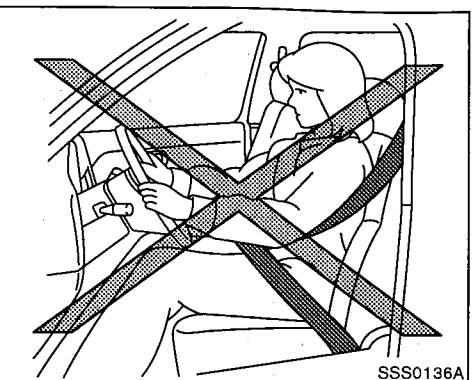

SSS0016

⚠ WARNING:

- Seatbelts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided. Serious injury may occur if a seat belt is not worn properly.
- Position the lap belt as low and snug as possible around the hips, not the waist. A lap belt worn too high could increase the risk of internal injuries in an accident.
- Do not allow more than one person to use the same seat belt. Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.
- Never carry more people in the vehicle than there are seat belts.
- Never wear seat belts inside out. Belts should not be worn with straps twisted. Doing so may reduce their effectiveness.
- Seatbelts should be adjusted as firmly as possible, consistent with comfort, to

provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

- Every person who drives or rides in this vehicle should use a seat belt at all times. Children should be properly restrained in the rear seat and, if appropriate, in a child restraint system.
- Do not run the belt behind your back or under your arm. Always route the shoulder belt over your shoulder and across your chest. The belt should be away from your face and neck, but not falling off your shoulder. Serious injury may occur if a seat belt is not worn properly.
- No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.
- Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

- It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

- All seat belt assemblies including retractors and attaching hardware should be inspected after any collision by a NISSAN dealer. NISSAN recommends that all seat belt assemblies in use during a collision be replaced unless the collision was minor and the belts show no damage and continue to operate properly. Seat belt assemblies not in use during a collision should also be inspected and, when necessary, replaced if either damage or improper operation is noted.

- Once the pre-tensioner seat belt has activated, it cannot be reused. It must be replaced together with the retractor. Contact a NISSAN dealer.

- Removal and installation of the pre-tensioner seat belt system components should be done by a NISSAN dealer.

CHILD SAFETY


⚠ WARNING:

- Infants and children need special protection. The vehicle's seat belts may not

fit them properly. The shoulder belt may come too close to the face or neck. The lap belt may not fit over their small hipbones. In an accident, an improperly fitted seat belt could cause serious or fatal injury.

- Always use an appropriate child restraint system.

Children need adults to help protect them. They need to be properly restrained. The proper restraint depends on the child's size.

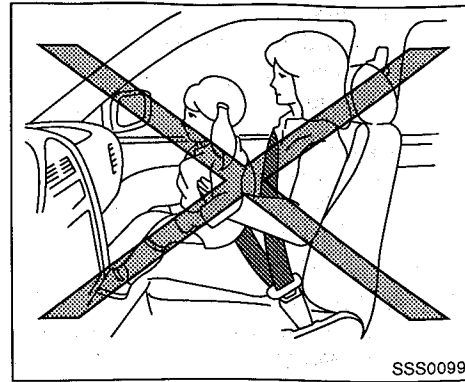

Infants and small children

NISSAN recommends that infants and small children be seated in a child restraint system. You should choose a child restraint system that fits your vehicle and the child, and always follow the manufacturer's instructions for installation and use.

Large children



WARNING:

- Never allow children to stand or kneel on any seats.
- Never allow children in the cargo areas while the vehicle is moving. A child

could be seriously injured in an accident or sudden stop.

Children who are too large for a child restraint system should be seated and restrained by the seat belts that are provided.


If the child's seating position has a shoulder belt that fits close to the face or neck, the use of a booster seat (commercially available) may help overcome this. The booster seat should raise the child so that the shoulder belt is properly positioned across the top, middle portion of the shoulder and the lap belt is low on the hips. The booster seat should also fit the vehicle seat. Once the child has grown so that the shoulder belt is no longer on or near the face or neck of the child, use the shoulder belt without the booster seat. In addition, there are many types of child restraint systems available for larger children that should be used for maximum protection.

PREGNANT WOMEN

NISSAN recommends that pregnant women use seat belts. The seat belt should be worn snug, and always position the lap belt as low as possible around the hips, not the waist. Place the shoulder belt over your shoulder and across your chest. Never run the lap/shoulder belt over your abdominal area. Contact your doctor for specific recommendations.

INJURED PERSONS


NISSAN recommends that injured persons use seat belts. Contact your doctor for specific recommendations.

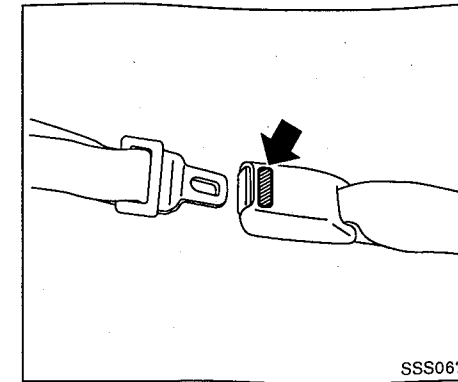

CENTER MARK ON SEAT BELTS (if so equipped)

Selecting correct set of seat belts

The center seat belt buckle is identified by the CENTER mark. The center seat belt tongue can be fastened only into the center seat belt buckle.

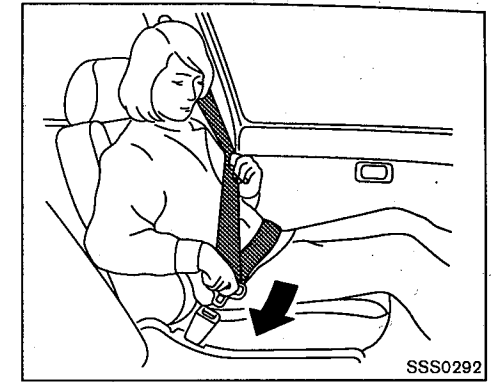

THREE-POINT TYPE SEAT BELTS




WARNING:

- Every person who drives or rides in this vehicle should use a seat belt at all times.
- The seatback should not be in a reclined position any more than needed for comfort. Seat belts are most effective when the passenger sits well back and straight up in the seat.

Fastening seat belts


1. Adjust the seat. (See "Seats" earlier in this section.)

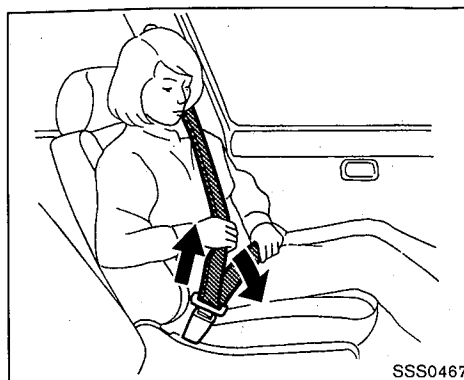

2. Slowly pull the seat belt out of the retractor and insert the tongue into the buckle until you hear and feel the latch engage.

The retractor is designed to lock during a sudden stop or on impact. A slow pulling motion permits the seat belt to move, and allows you some freedom of movement in the seat.

3. Position the lap belt portion low and snug on the hips as shown.
4. Pull the shoulder belt portion toward the retractor to take up extra slack. Be sure the shoulder belt is routed over your shoulder and is snug across your chest.

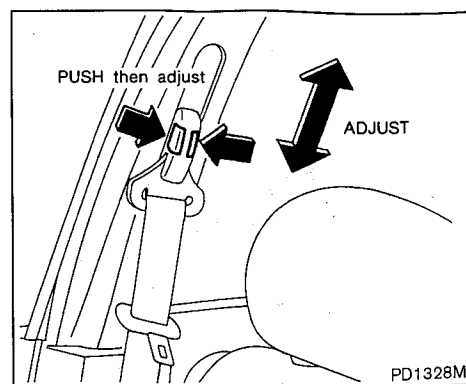

Shoulder belt height adjustment (if so equipped)

WARNING:

- **The shoulder belt anchor height should be adjusted to the position best for you. Failure to do so may reduce the effectiveness of the entire restraint system and increase the chance or severity of injury in an accident.**
- **The shoulder belt should rest on the middle of the shoulder. It must not rest against the neck.**
- **Be sure that the seat belt is not twisted in any way.**

- **Be sure that the shoulder belt anchor is secured by trying to move the shoulder belt anchor up and down after adjustment.**

The shoulder belt anchor height should be adjusted to the position best for you.

The belt should be away from your face and neck, but not falling off your shoulder.

To adjust, push the release button and move the shoulder belt anchor to the proper position, so that the belt passes over the center of the shoulder.

Release the button to lock the shoulder belt anchor into position.

Unfastening seat belts

Push the button on the buckle. The seat belt automatically retracts.

Automatic locking mode (if so equipped)

The rear three-point seat belts (except center seat belt) have an automatic lock mechanism to use when installing a child restraint system. This mechanism is referred to as the automatic locking mode.


If the seat belt is fully extended, the automatic lock mechanism will be activated and the seat

belt can only retract. The seat belt will not be able to extend unless the seat belt is fully retracted once.

To deactivate the automatic locking mode, detach the seat belt tongue from the buckle and fully retract the belt to its storing position.


CAUTION:

The automatic locking mode should be used only for installation of a child restraint system. During normal seat belt use by a passenger, the automatic locking mode should not be activated. The use of the automatic locking mode by a passenger may cause uncomfortable seat belt tension.

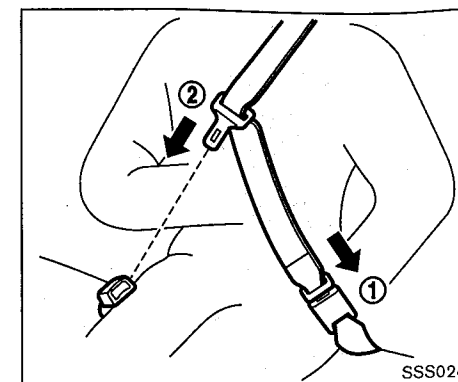

Three-point type rear center seat belt (if so equipped)

The rear center seat belt has a connector tongue ① and a seat belt tongue ②. Both the connector tongue and the seat belt tongue must be securely latched for proper seat belt operation.

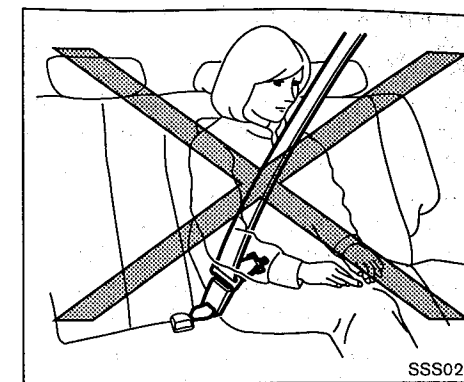


WARNING:

- **Always fasten the connector tongue and the seat belt in the order shown.**
- **Always make sure both the connector tongue and the seat belt tongue are secured when using the seat belt. Do not use it with only the seat belt tongue attached. This could result in serious personal injury in case of an accident or a sudden stop.**

Stowing rear center seat belt:


⚠ WARNING:

- Do not unfasten the rear center seat belt connector except when folding down the rear seat.
- When attaching the rear center seat belt connector, be certain that the seatbacks are completely secured in the latched position and the rear center seat belt connector is completely secured.
- If the rear center seat belt connector and the seatbacks are not secured in the correct position, serious personal injury may result in an accident or sudden stop.

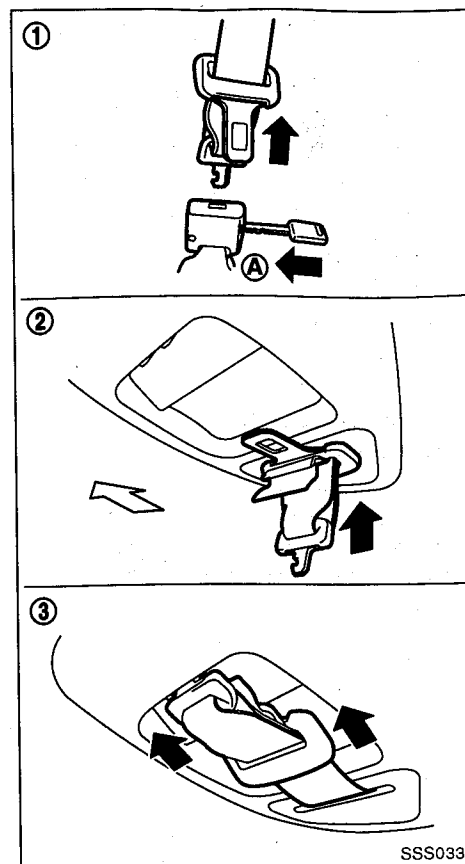

When folding down the rear seat, the rear center seat belt can be retracted into a stowed position as follows:

1. Hold the connector tongue so that the seat belt does not retract suddenly when the tongue is released from the connector buckle.
2. Insert a suitable tool such as a key **A** into the connector buckle and release the connector tongue.
3. Retract the seat belt up to the retractor base.
4. Secure the seat belt tongue and connector tongue into the retractor base.

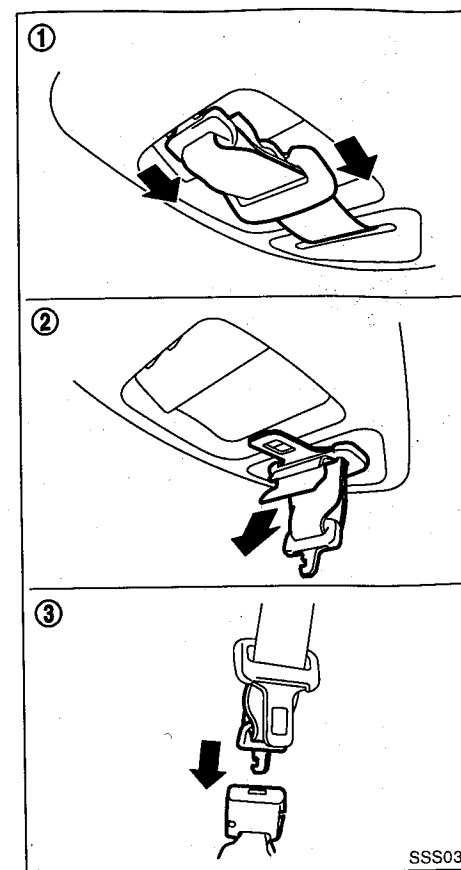

Attaching rear center seat belt:

Always be sure the rear center seat belt connector tongue and connector buckle are attached. Disconnect only when folding down the rear seat.

To connect the buckle:

1. Pull out the connector tongue and seat belt tongue from the retractor base.
2. Pull the seat belt.
3. Secure the connector tongue to the connector buckle until it clicks.

The center seat belt connector tongue and buckle are indicated by the "▼" and "▲" mark.

The center seat belt connector tongue can be attached only into the rear center seat belt connector buckle.

⚠ WARNING:

- Do not unfasten the rear center seat belt connector except when folding down the rear seat.
- When attaching the rear center seat belt connector, be certain that the seatbacks are completely secured in the latched position and the rear center seat belt connector is completely secured.


- If the rear center seat belt connector and the seatbacks are not secured in the correct position, serious personal injury may result in an accident or sudden stop.

Checking seat belts operation

Seat belt retractors are designed to lock seat belt movement:

- When the seat belt is pulled quickly from the retractor.
- When the vehicle slows down rapidly.

To increase your confidence in the seat belts, check the operation by grasping the shoulder belt and pulling forward quickly. The retractor should lock and restrict further belt movement. If the retractor does not lock during this check, contact a NISSAN dealer immediately.

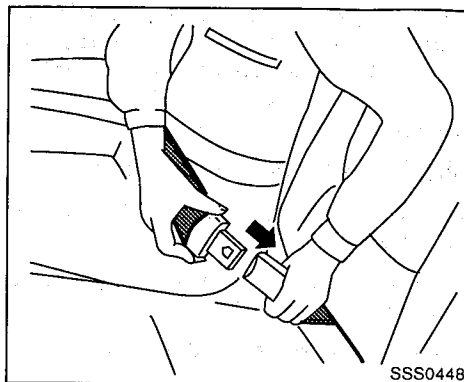

CENTER until you hear and feel the latch engage.

TWO-POINT TYPE SEAT BELTS (if so equipped)

WARNING:


Every person who drives or rides in this vehicle should use a seat belt at all times.

Fastening seat belts


WARNING:

The seatback should not be in a reclined position any more than needed for comfort. Seat belts are most effective when the passenger sits well back and straight up in the seat.

1. Insert the tongue into the buckle marked

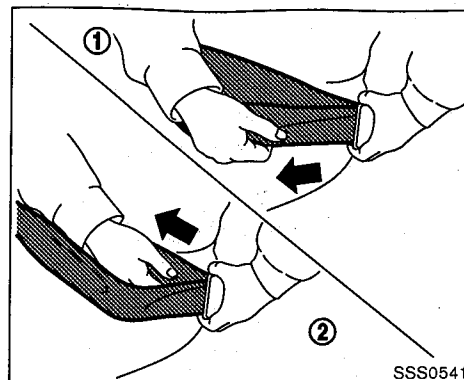

2. Adjust the seat belt length. To shorten, hold the tongue and pull the upper belt as illustrated ①. To lengthen, hold the tongue and pull the under belt as illustrated ②.

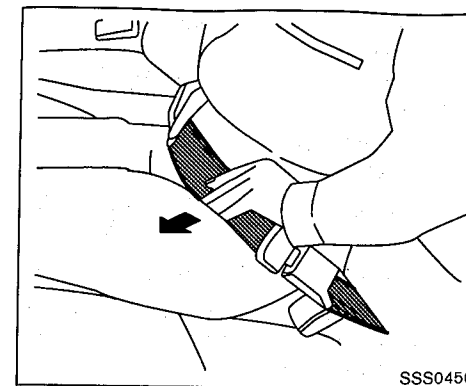

3. Position the lap belt portion low and snug on the hips as shown.

Unfastening seat belts


Push the button on the buckle.

Fasten the seat belts when not in use to prevent them from being caught in the door.

SEAT BELT MAINTENANCE

Periodically check that the seat belt and all the metal components, such as buckles, tongues, retractors, flexible wires and anchors, work properly. If loose parts, deterioration, cuts or other damage on the seat belt webbing is found, the entire seat belt assembly should be replaced.

CHILD RESTRAINTS

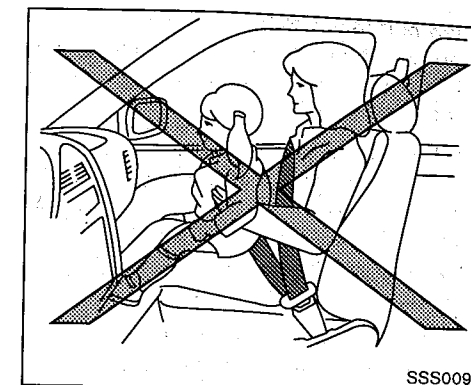

PRECAUTIONS ON CHILD RESTRAINTS USAGE

WARNING:

- Infants and small children should never be carried on your lap. It is not possible for even the strongest adult to resist the forces of a severe accident. The child could be crushed between the adult and parts of the vehicle. Also, it is dangerous to put a seat belt around a child being carried on the occupant's lap.
- Infants and children need special protection. The vehicle's seat belts may not fit them properly. The shoulder belt may come too close to the face or neck. The

lap belt may not fit over their small hip bones. In an accident, an improperly fitting seat belt could cause serious or fatal injury.

- Infants and small children should always be placed in an appropriate child restraint system while riding in the vehicle. Failure to use a child restraint system can result in serious injury or death.
- Child restraint systems specially designed for infants and small children are available from several manufacturers. When selecting any child restraint systems, place your child in the child restraint system and check the various adjustments to be sure that the child restraint system is compatible with your child. Always follow the manufacturer's instructions for installation and use.
- NISSAN recommends that the child restraint system be installed in the rear seat. According to accident statistics, children are safer when properly restrained in the rear seat rather than in the front seat.
- Follow all of the child restraint system manufacturer's instructions for installation and use. When purchasing a child

restraint system, be sure to select one which will fit your child and vehicle. It may not be possible to properly install some types of child restraint systems in your vehicle.

- For a front-facing child restraint system, check to make sure the shoulder belt does not fit close to child's face or neck. If it does, put the shoulder belt behind the child restraint system.
- For models equipped with the front passenger air bag, never install a rear-facing child restraint system in the front seat. An inflating supplemental front-impact air bag could seriously injure or kill your child. A rear-facing child restraint system must only be used in the rear seat.
- Adjustable seatbacks should be positioned to fit a child restraint system, but as upright as possible.
- If the seat belt in the position where a child restraint system is installed requires a locking clip and if it is not used, injuries could result from a child restraint system tipping over during normal vehicle braking or cornering.
- After attaching a child restraint system,

test it before you place the child in it. Tilt it from side to side. Try to tug it forward and check if it is held securely in place. If the restraint is not secure, tighten the belt as necessary, or install the restraint in another seat and test it again.

- Check the child restraint system in your vehicle to be sure that it is compatible with the vehicle's seat belt system.
- If a child restraint system is not anchored properly, the risk of a child being injured in a collision or a sudden stop greatly increases.
- Improper use of a child restraint system can increase the risk or severity of injury for both the child and other occupants in the vehicle.
- Always use an appropriate child restraint system. An improperly installed child restraint system could lead to serious injury or death in an accident.
- When the child restraint system is not in use, keep it secured with a seat belt to prevent it from being thrown around in case of a sudden stop or accident.

NISSAN recommends that infants and small children be seated in a child restraint system. You should choose a child restraint system that

fits your vehicle and always follow the manufacturer's instructions for installation and use. In addition, there are many types of child restraint systems available for larger children that should be used for maximum protection.

CAUTION:

Remember that a child restraint system left in a closed vehicle can become very hot. Check the seating surface and buckles before placing your child in a child restraint system.

UNIVERSAL CHILD RESTRAINTS FOR FRONT PASSENGER SEAT AND REAR SEATS (for Europe)

When selecting any child restraint, keep the following points in mind:

- Choose a child restraint that complies with the latest European safety standard, ECE Regulation No. 44.03.
- Place your child in the child restraint and check the various adjustments to be sure the child restraint is compatible with your child. Always follow all of the recommended procedures.
- Check the child restraint in your vehicle to be sure it is compatible with vehicle's seat belt system.

- Refer to the tables later in this section for a list of the recommended fitment positions and the approved child restraints for your vehicle.

Approved child restraint positions

Age group	Seating position				
	Front passenger with air bag	Front passenger without air bag	Rear center	Rear outer	3rd row outboard (if so equipped)
< 10 kg (0 to 9 months)	X	LR	X	LR	LR
< 13 kg (0 to 24 months)	X	X	X	X	X
9 to 18 kg (9 to 48 months)	LF	L	L	L	L
15 to 36 kg (4 to 12 years)	LF	L	L	L	L

X: Seat position not suitable for restraints in this age group.
 L: Suitable for particular child restraints given in the following table.
 LF: Suitable for particular front facing child restraints given in the following table.
 LR: Suitable for particular rear facing child restraints given in the following table.

NOTE:
 Universal child restraints approved to ECE Regulation No. 44.03 are clearly marked "Universal".

List of approved child restraints

Age group	Seating position				
	Front passenger with air bag	Front passenger without air bag	Rear center	Rear outer	3rd row outboard (if so equipped)
< 10 kg (0 to 9 months)	X	Romer Baby Safe	X	Romer Baby Safe	Romer Baby Safe
< 13 kg (0 to 24 months)	X	X	X	X	X
9 to 18 kg (9 to 48 months)	Romer King Romer Peggy	Romer King Romer Peggy	Romer King Romer Peggy	Romer King Romer Peggy	Romer King Romer Peggy
15 to 36 kg (4 to 12 years)	Romer Vario Romer Star Riser	Romer Vario Romer Star Riser	Romer Vario	Hardtop models: Romer Vario Wagon models: Romer Vario Romer Star Riser	Romer Vario

 **WARNING:**


In vehicles equipped with a side air bag system, do not let any infants or small children sit in the front passenger's seat as the air bag may cause serious injury in case of deployment during a collision.

INSTALLATION OF CHILD RESTRAINT SYSTEM

Installation on rear seats - seat belts with automatic locking mode

⚠ WARNING:

- The rear three-point seat belts on your vehicle are equipped with automatic locking mode retractors. The three-point seat belts must be used when installing a child restraint system.
- Failure to use the rear three-point seat belts will result in the child restraint system not being properly secured. It could tip over or otherwise be unsecured and cause injury to the child in a sudden stop or collision.
- The direction of the child restraint system depends on the type of the child restraint system and the size of the child.

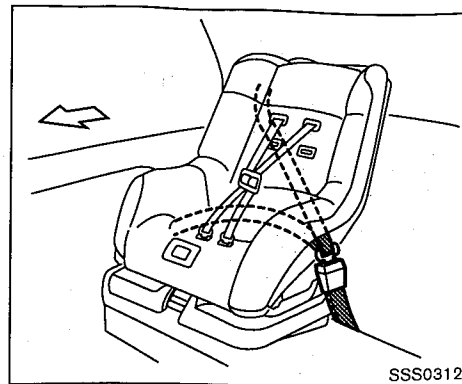


Front-facing:

When you install a front-facing child restraint system in the rear seat, follow these steps:


1. Position the front-facing child restraint system on the rear seat.

Always follow the child restraint system manufacturer's instructions for installation.

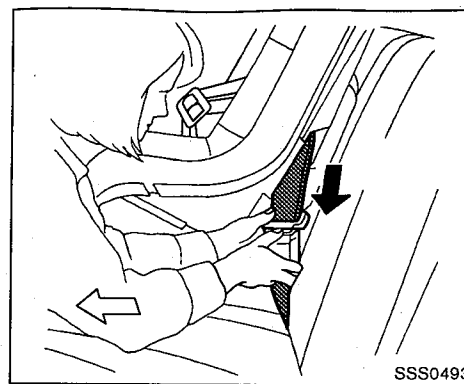


2. Route the seat belt tongue through the child restraint system and insert it into the buckle until you hear and feel the latch engage.

Be sure to follow the child restraint system manufacturer's instructions for belt routing.

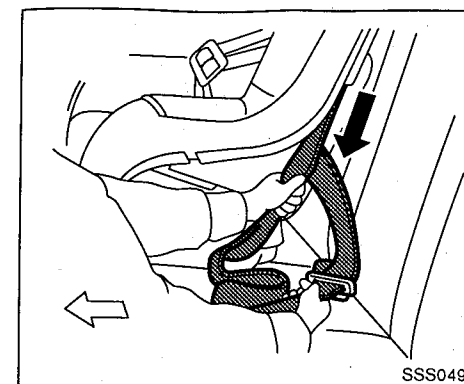

3. Pull out the shoulder belt until the entire belt is extended to change the locking mode to automatic locking.

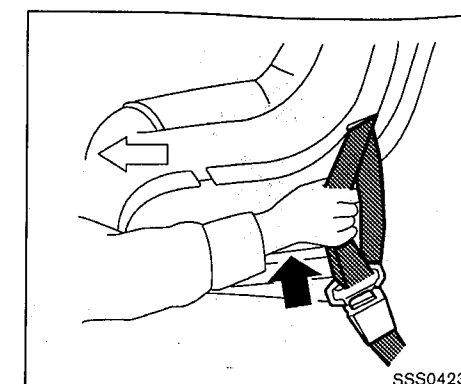

4. Allow the seat belt to retract. Pull up the shoulder belt to remove any slack in the belt.
5. Test the child restraint system before you place the child in it. Tilt it from side to side. Try to tug it forward and check if it is held securely in place.
6. Check that the retractor is in the automatic locking mode by trying to pull more of the seat belt out of the retractor. If you cannot pull any more belt webbing out of the retractor, the retractor is in the automatic locking mode.
7. Make sure that the child restraint system is properly secured prior to each use. If the seat belt is not locked, repeat steps 3 through 6.

After the child restraint system is removed and the seat belt is fully retracted, the automatic locking mode is cancelled and returned to the emergency locking mode.